

CE 🚷 IO-Link

## **Model Number**

# OBD1000-R100-2EP-IO-V31

Diffuse mode sensor

with 4-pin, M8 x 1 connector

#### **Features**

- Miniature design with versatile • mounting options
- Extended temperature range ٠ -40°C ... 60°C
- High degree of protection IP69K
- IO-link interface for service and • process data


## **Product information**

The R100 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

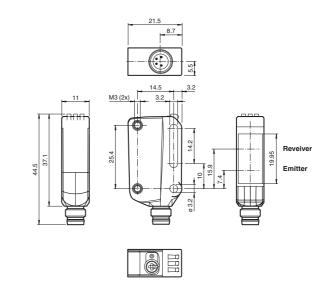


#### **Electrical connection**

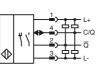


**Dimensions** 

#### Pinout

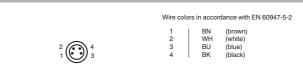

## Indicators/operating means

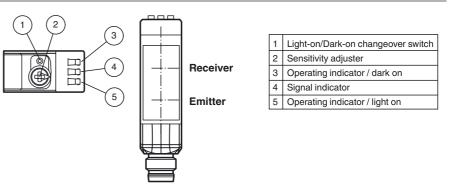

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



General specifications		
Detection range		2 1000 mm
Detection range min.		20 50 mm
Adjustment range		50 1000 mm
Reference target		standard white, 100 mm x 100 mm
Light source		LED
Light type		modulated visible red light
LED risk group labelling		exempt group
Diameter of the light spot		approx. 65 mm at a distance of 1000 mm
Angle of divergence		3.7 °
Ambient light limit		EN 60947-5-2
Functional safety related param	neters	
MTTFd		724 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator		LED yellow: constantly on - object detected constantly off - object not detected
Control elements		Light-on/dark-on changeover switch
Control elements		Sensing range adjuster
Electrical specifications		
Operating voltage	UB	10 30 V DC
Ripple		max. 10 %
No-load supply current Protection class	Ι <sub>Ο</sub>	< 25 mA at 24 V supply voltage III
Interface		
Interface type		IO-Link ( via C/Q = pin 4 )
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1
Min. cycle time		2.3 ms
Process data witdh		Process data input 1 Bit Process data output 2 Bit
SIO mode support		yes
Device ID		0x110101 (1114369)
Compatible master port type		A
Output		The second states and
Switching type		The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / light-on, PNP normally close dark-on, IO-Link /Q - Pin2: NPN normally closed / dark-on, PNP normally ope light-on
Signal output		2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA, resistive load
Usage category		DC-12 and DC-13
Voltage drop	U <sub>d</sub> f	≤ 1.5 V DC 1000 Hz
Switching frequency Response time	T	0.5 ms
•		0.5 ms
Conformity Communication interface		IEC 61131-9
Product standard		EN 60947-5-2
		EN 60947-5-2
Ambient conditions Ambient temperature		-40 60 °C (-40 140 °F)
Storage temperature		-40 70 °C (-40 140 °F) -40 70 °C (-40 158 °F)
		-40 70 0 (-40 130 1 )
Mechanical specifications		44
Housing width Housing height		11 mm 44.5 mm
Housing height Housing depth		44.5 mm 21.5 mm
Degree of protection		IP67 / IP69 / IP69K
Connection		M8 x 1 connector, 4-pin
Material		
Housing		PC (Polycarbonate)
-		PMMA
Optical face		
Optical face Mass		approx. 10 g

#### Accessories

IO-Link-Master02-USB IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-R10X-01 Mounting bracket

OMH-R10X-02 Mounting bracket

OMH-R10X-04 Mounting bracket

OMH-R10X-10 Mounting bracket

OMH-ML100-03 Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

OMH-ML100-031 Mounting aid for round steel ø 10 ... 14 mm or sheet 1 mm ... 5 mm

V31-GM-2M-PUR Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com

www.pepperl-fuchs.com


fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com PEPPERL+FUCHS

2


## **Curves/Diagrams**

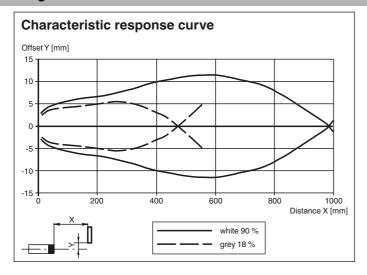

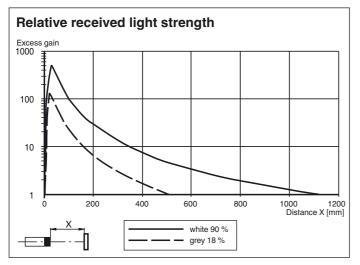

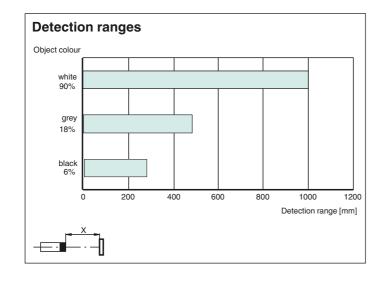

## **Functions and Operation**

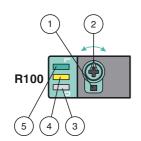

1 - Light-on / dark-on changeover switch

- 2 Sensing range / sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

#### Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

#### Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

#### **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.

Δ

